AirMobi

Quick Installation Guide

WiFi Music Receiver

iReceiver

Part 1: Package List

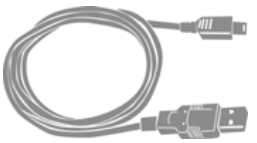

iReceiver Micro USB Cable Quick Installation Guide

If any of the above items are missing, please contact your reseller.

Part 2: Hardware Overview

LED Status	Description
Solid Red	During Power ON or system is defective.
Solid Blue	The device is powered ON and operating properly.
Blinking Blue	The device is processing WPS or settings are saving by App.

Button	Description
WPS	Used to connect your wireless network quickly.
RST	Used to reset device to factory default setting.

Part 3: Music Streaming

Step 1: Use a USB adapter (5 V, 0.5 A) to power iReceiver and connect your speakers to iReceiver with an audio cable. Verify that the power LED has turned blue.

Step 2: Connect your mobile device or notebook to iReceiver through WiFi.

Step 3: Send music on mobile device to iReceiver with App or send music on notebook to iReceiver with iTunes. **(The usage of App refer to the Instructions of App)**

☞ **iOS 7 device can use the function of music streaming with any music player Apps.**

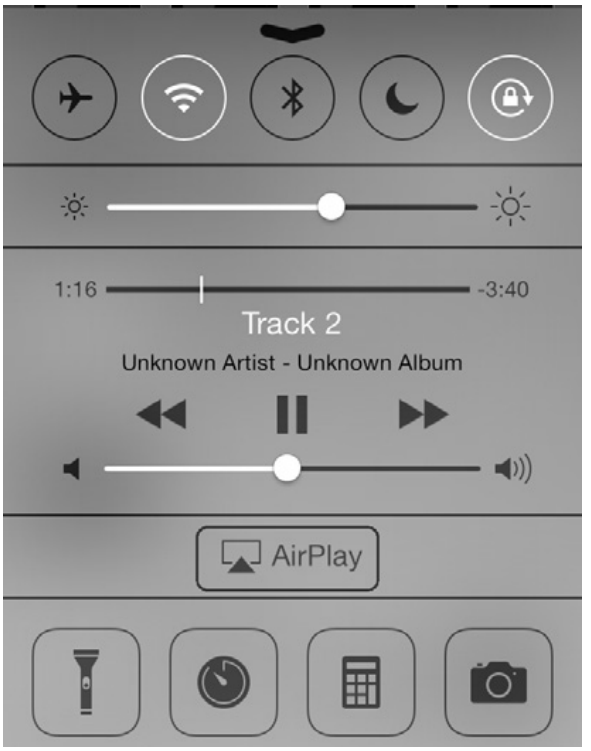

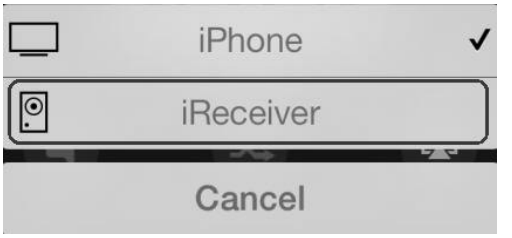

Part 4: Installation

Use a USB adapter (5 V, 0.5 A) to power iReceiver. Verify that the power LED has turned blue. You can use the following three methods to setup iReceiver.

Setup with WPS button

Step 1: Press the WPS button of your root wireless router or AP, and then press the WPS button of iReceiver within two minutes. iReceiver will connect to your root wireless router or AP automatically.

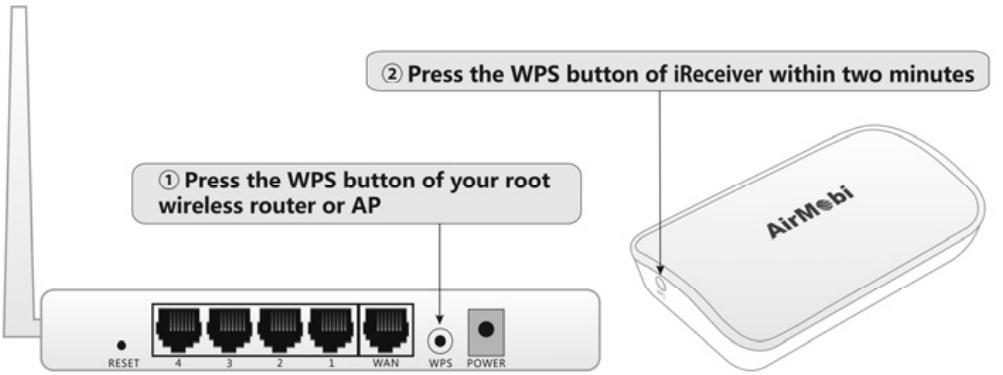

Setup with Web page

Step 1: From your laptop or mobile device go to your Wireless Utility to display the available wireless networks and select the WiFi name (ex: AirMobi_FB87FE).

Step 2: Open your Web browser and type **192.168.8.8** in the address bar, press **Enter.** A login page will pop up asking you for Password. Enter the default Password **admin**, click **Login**.

Step 3: Follow the **Setup Wizard** to finish the configuration step-by-step.

Setup with App

Step 1: Connect your mobile device to iReceiver through WiFi.

Step 2: Open the App, click on the icon to enter the settings page.

Step 3: Follow the **Setup Wizard** to finish the configuration step-by-step.

By default, the WiFi name and WiFi password of iReceiver are same as your root wireless router or AP after configuration. You can change the WiFi name and WiFi password through web page or App. If your root wireless router or AP can connect to Internet, your Smart Phone, Tablet and notebook can access Internet after it connected to iReceiver.

Part 5: Instructions of App

Step 1: Search the App on the App store or Google Play, and you also can scan the QR code to download and install the **iReceiver App** to your iPhone, iPad or Android devices.

Available on the App Store

ANDROID APP ON Google play

Step 2: Once installed click on the icon

to open the iReceiver.

Step 3: Enter the following interface. Click on the icon surrounded by the square frame, choose play in **iReceiver**, and then the music will play on the stereo.

Android

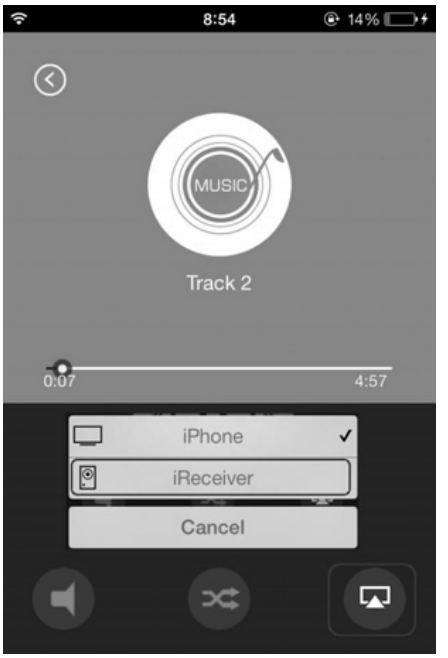

iOS

Step 4: Click on the icon to enter the settings page. You can view and modify settings of iReceiver.

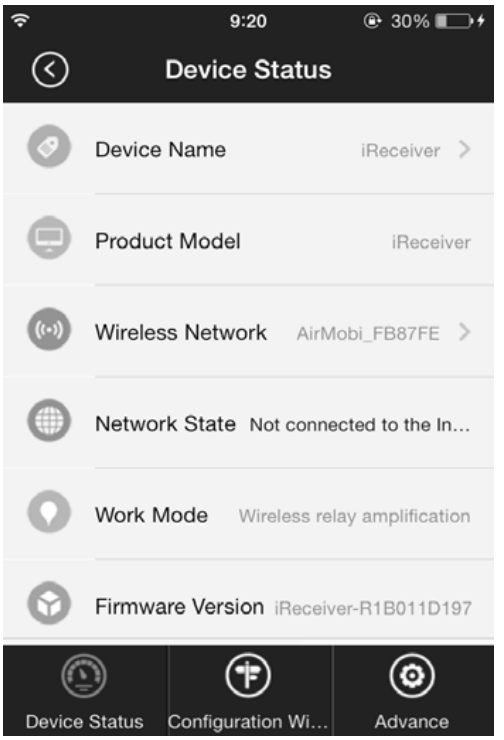

Technical Support

For more information or troubleshooting help, please download the User Manual from our website.
Additional support is also available on our website: **www.cctairmobi.com**

The website contains the latest user documentations and software updates for AirMobi products.
Support E-mail Address: **support@cctairmobi.com**

Copyright©2013 Shenzhen Huaxunark Technology Co., Ltd. All rights reserved.